

Montaje para Base Top Case MASTECH

Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.


Herramientas:













Kit llaves hexágonas

Kit llaves torx



Kit Instalado

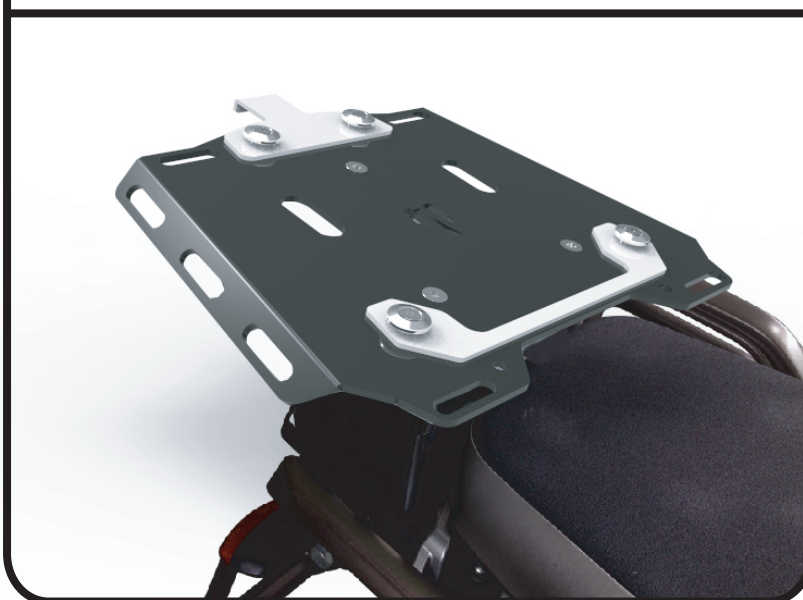

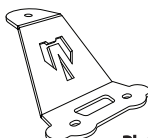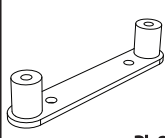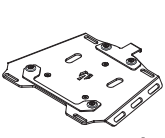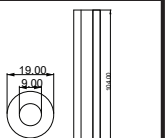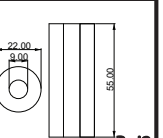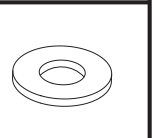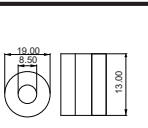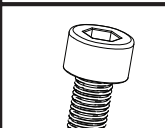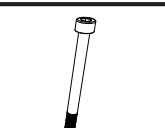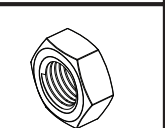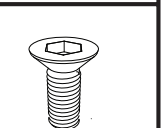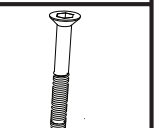Platina Soporte  Pla1 Cantidad: 1	Platina Apoyo  Pla2 Cantidad: 1	Platina Aluminio  Pla3 Cantidad: 1	Buje Aluminio A  Buj1 Cantidad: 2	Buje Aluminio B  Buj2 Cantidad: 2	Arandela plana M8 Inox  Ara1 Cantidad: 1
Buje Aluminio C  Buj3 Cantidad: 2	Tornillo Socket M8 x 45 galv.  T1 Cantidad: 2	Tornillo Socket M8 x 120 galv.  T2 Cantidad: 2	Tuerca seg. M8 inox.  TCA1 Cantidad: 1	Tornillo Avellanado M8 x 20 inox.  T4 Cantidad: 1	Tornillo Avellanado M8 x 80 inox.  T5 Cantidad: 2

Instalación


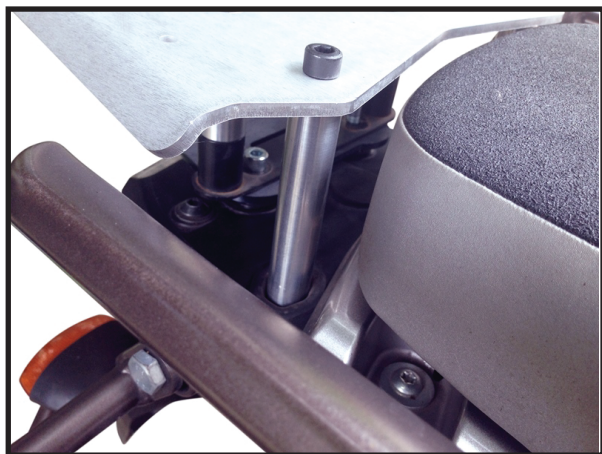


Imagen 1



Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.

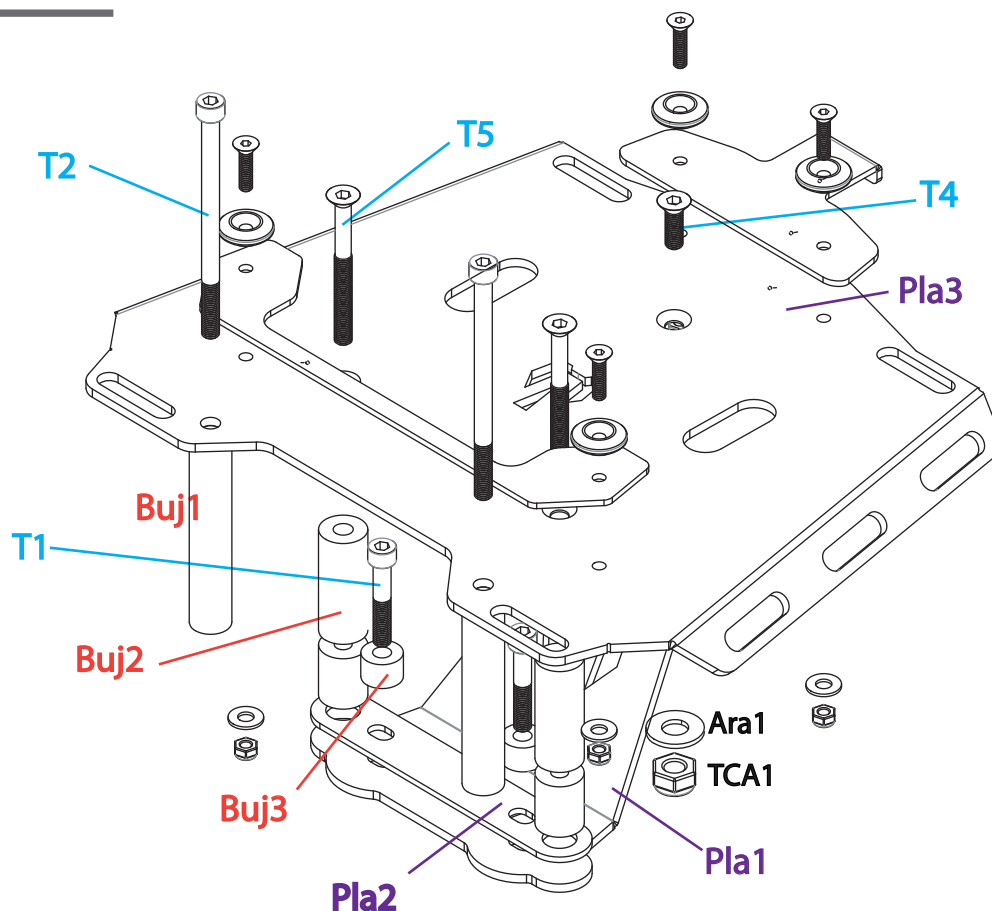

MASTECH

YAMAHA SUPER TENERÉ 1200 2014 - UP V2

Assembly Instructions top case rack for mastech pannier

 Esp/Spa  Ing/Eng

Note :

Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.












Tools Required:

Hex Allen Wrench Set
Combination Wrench Set



Assembled kit

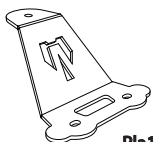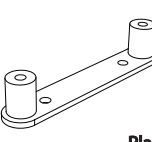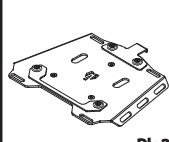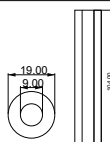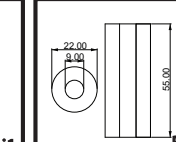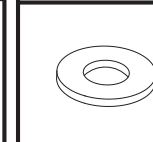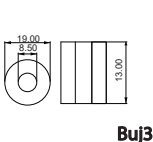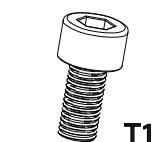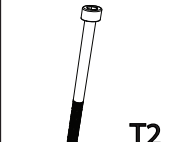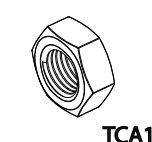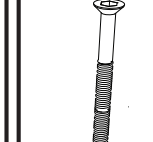

Support plate  Pla1 Quantity1	Support plate  Pla2 Quantity1	Aluminum plate  Pla3 Quantity1	Aluminum bushing A  Buj1 Quantity2	Aluminum bushing B  Buj2 Quantity2	Flat washer M8 INOX  Ara1 Quantity1
Aluminum bushing C  Buj3 Quantity2	Socket screw M8 x 45 galv.  T1 Quantity2	Socket screw M8 x 120 galv.  T2 Quantity2	Safe nut M8 inox.  TCA1 Quantity1	Countersunk screw M8 x 20 inox.  T4 Quantity1	Countersunk screw M8 x 80 inox.  T5 Quantity2

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened

Installation


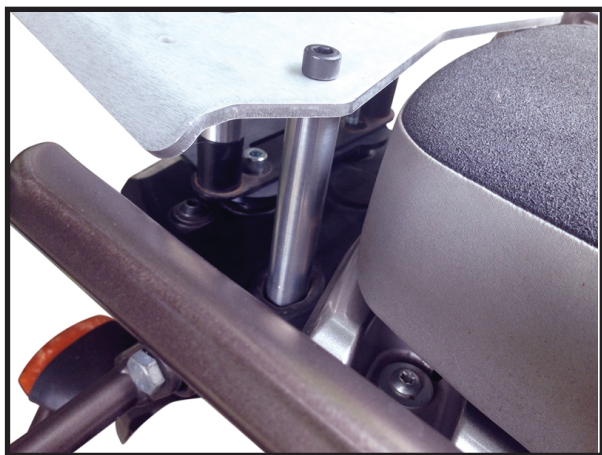


Imagen 1

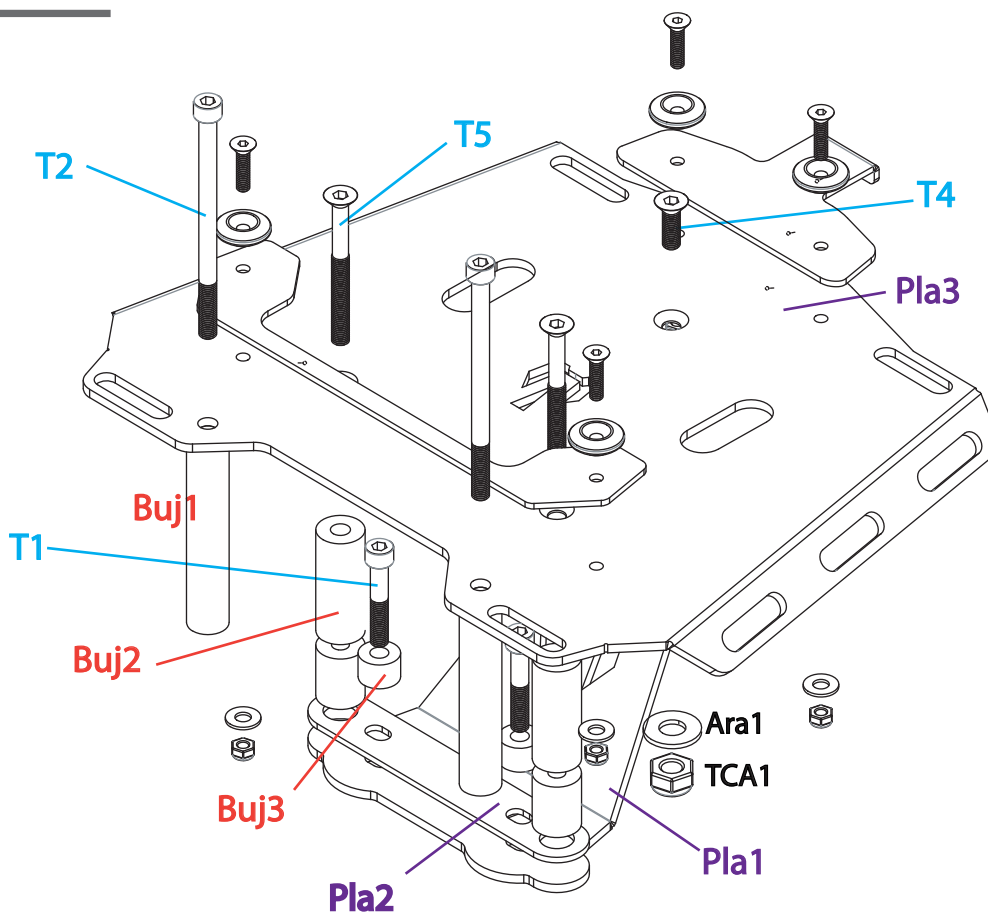

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened