

Montaje de slider para tijera



Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

Herramientas:

Kit llaves hexágonas



Kit Instalado



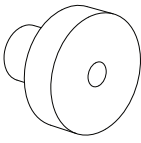
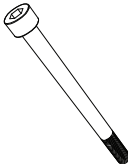
Instalación

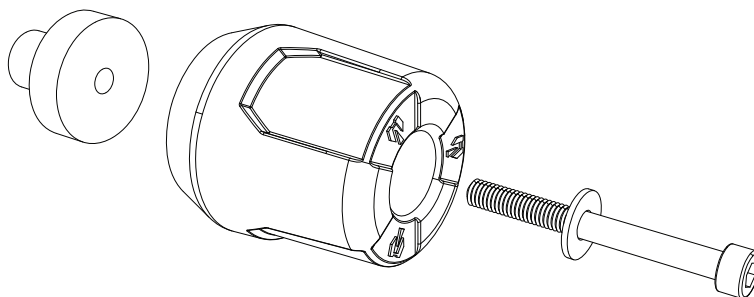
1- Ubique la perforación mostrada en la imagen y instale los sliders de tijera con los insumos incluidos en el kit, como lo indica el esquema.



2 - Repita los dos pasos en cada uno de los lados

El Kit Contiene:

Buje aluminio	Punta plastica	Tornillo socket M6 x 60	Arandela M6
			
Cantidad: 2	Cantidad: 2	Cantidad: 2	Cantidad: 2



Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



MASTECH

YAMAHA MT09 17-UP

Assembly instruction for spools



Note :

Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.

Tools Required:

Hex Allen Wrench Set



Assembled kit



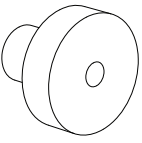
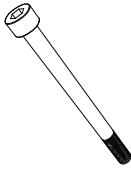
Installation

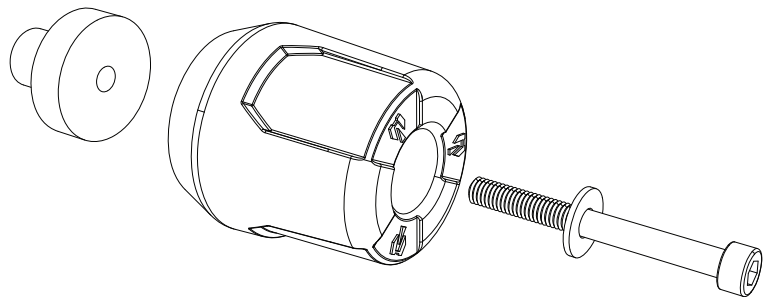
1- Locate the perforation shown on the image and installed the spool with the supplies included on the kit, like indicated on the scheme.



2 - Repeat the two steps on each side

Parts Included:

Aluminium bush	Plastic tips	Socket screw M6 x 60	Washer M6
			
Quantity 2	Quantity 2	Quantity 2	Quantity 2



After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened

Calle 76 # 52D - 74 / Telefax: (57+4) 448 8428 / Medellín - Colombia
www.mastechno.com